




AIR CONDITIONER

KEEP THIS MANUAL FOR FUTURE REFERENCE

SIMPLE REMOTE CONTROLLER (WIRED TYPE)

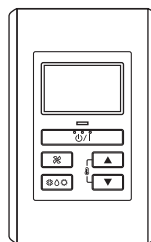

OPERATING MANUAL

FUJITSU GENERAL LIMITED

P/N 9371069029-02

English

SAFETY PRECAUTIONS

The "SAFETY PRECAUTIONS" indicated in this operating manual contain important information pertaining to your safety. Be sure to observe them.

Details of the operation methods refer to the operating manual. Request the user to keep them on hand for future use, such as for relocating or repairing the unit.



WARNING

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

- In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.
• Do not repair or modify any damaged cable by yourself. Let the authorized service personnel to do it. Improper work will cause a electric shock or a fire.
• This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs.
• When moving, consult authorized service personnel for disconnection and installation of this unit.
• Do not touch with wet hands. It may cause an electric shock.
• If children may approach the unit, take preventive measures so that they cannot reach the unit.
• Do not repair or modify by yourself. It may cause a fault or accident.
• Do not use flammable gases near this equipment. It may cause a fire from leaking gas.



CAUTION

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

- Do not set vessels containing a liquid on this unit. Doing so will cause heating, fire, or electric shock.
• Do not expose this unit directly to water. Doing so will cause trouble, electric shock, or heating.
• Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags.
• Do not place electrical devices within 1 meter of this unit. It may cause malfunction or failure.
• Do not use fire near this unit or place a heating apparatus nearby. It may cause malfunction.
• Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.

OPERATING TIPS

Cooling / heating priority

(AIRSTAGE™ (VRF-II Series Heat Pump model only))

- If another indoor unit in the same system is already operating in the cooling mode or dry mode, heating mode settings cannot be performed.
• An indoor unit that is set up as an administrative indoor unit can operate in the AUTO mode.

Administrative indoor unit:

Special indoor unit is not restricted by the switching of cooling and heating described above.

It may happen if the unit is set to refrigerant system setting.

TROUBLE SHOOTING

Before requesting service, perform the following checks:

Table with 3 columns: Symptom, Cause and Action. Row 1: Symptom: Doesn't operate at all. Cause and Action: Has there been a power failure? Has a fuse blown out, or a circuit breaker been tripped? Is the main power switch set to the OFF position? Is the timer operating?

 
 
If the problem persists after performing these checks, or if you notice burning smells, or the operation lamp flashes, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

SPECIFICATIONS

Table with 2 columns: MODEL, POWER, DIMENSION & WEIGHT. Rows include: MODEL: UTY-RSK\*, POWER: DC12V, DIMENSION & WEIGHT: HEIGHT [mm] 120, WIDTH [mm] 75, DEPTH [mm] 14, WEIGHT [g] UTY-RSKY/UTY-RSKG 90, UTY-RSKYT 100.

# OPERATION

 
## START / STOP

Each press of the  button alternates operation and stop.  
When operating, operation lamp (green)  will light up.


## FAN SPEED

Press the  button while in operation.

### i NOTES



## OPERATION MODE

Press  button while in operation.


### i NOTES






- \* A heat pump model that is not set up as a master indoor unit cannot operate in the AUTO and FAN modes.
- \* If the priority mode is set to "Priority on Control Indoor Unit", the operating mode of other indoor units except Control Indoor Unit will be controlled by a Control Indoor Unit.
- \* If the operating mode of Administrative Indoor Unit is set to "AUTO", "AUTO" is displayed in addition to the display of current operating mode on other wired remote controllers except Administrative Indoor Unit. In this case, operation of other indoor units is controlled by the Administrative Indoor Unit.

Ex. :  
When operating mode of the Administrative Indoor Unit is set to "AUTO" while air conditioning setting. (The indication on other wired remote controllers except Administrative Control Indoor Unit).

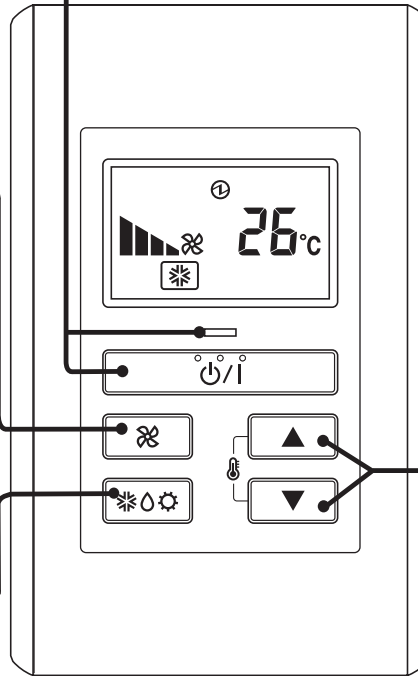When Administrative Indoor Unit is set to "AUTO".



### i NOTES

- (1) Display panel lights up.
- (2) When  is displayed, there are functions for which settings cannot be made.  
When a button is pushed to change a restricted setting,  will flash.
- (3) During Automatic Defrosting operation and Oil Recovery operation,  will be displayed on the remote controller.
- (4) When connecting with other controllers, the indoor unit might be controlled by the other controllers.
- (5) The wired remote controller or the wireless remote controller can also be used with this unit.

## TEMPERATURE


Press the  /  button while in operation.

### i NOTES

Temperature setting range  
 AUTO ..... 18 to 30°C  
 HEAT ..... 16 to 30°C  
 COOL/DRY ..... 18 to 30°C  
 The temperature setting should be considered a standard value, and may differ somewhat from the actual room temperature.

## ERROR CODE DISPLAY

If an error occurs, the following display will be shown.  
 ("Er" will appear in the set room temperature display.)  
**If "Er" is displayed, immediately contact authorized service personnel. Do not use the operation as shown to the right if an error has occurred.**

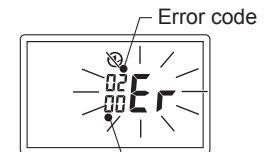

Faulty unit No.  
(Remote controller address)

Ex. Error code display